

**Kody programowania Honeywell 1250G  
do kasy SHARP ER-A285P**



DEFOVR.

**Remove Custom Defaults**



DEFAULT.

**Activate Defaults**



232CTS1.

**Flow Control, No Timeout**



PREBK2.

**Add Prefix**



K6K

6



K4K

4



K4K

4



K6K

6



MNUSAV.

**Save**



PREBK2.

**Add Prefix**



K4K

4



K4K

4



K4K

4



K6K

6



K4K

4



K6K

6



MNUSAV.

**Save**



PREBK2.

**Add Prefix**



K6K

6



K3K

3



K4K

4



K1K

1



MNUSAV.

**Save**



PREBK2.

**Add Prefix**



K4K

4



K5K

5



K4K

4



K5K

5



MNUSAV.

**Save**



VSUF CR.

**Add CR Suffix  
All Symbolologies**